# ISESAR IS-X67S



## **Premium SIP touch screen for spaces**

NEXhome X67S is a 7-inch Linux indoor unit. The slim design can fit into limited spaces. With variety of features and stable performance, this model is good for apartment buildings projects.



## **Highlights**

- Linux system
- 7-inch touchscreen and hands-free intercom
- Connect up to 8 security sensors
- Can call elevator from home
- Can monitor security cameras

- Call with manager and tenants
- Support PoE
- Build-in Wi-Fi (Optional)
- Easy to integrated with SIP systems and services

PHYSICAL & POWER

## **Physical & Power**

- Front panel: ABS
- RAM / ROM: 128MB / 128MB
- Display: 7-inch TFT-LCD
- Screen: Capacitive touch screen
- Wi-Fi: IEEE802.11b/g/n, @2.4GHz (Optional)
- RS485: Support
- Bell in: 1
- I/O: 8 (for alarms and sensors)
- Relayout: 1
- Output: 1

- Microphone: -40dBV
- Speaker: 8Ω/1W
- Ethernet: 1×RJ45, 10/100Mbps self-adaptive
- 802.3af Power-over-Ethernet
- DC12V/1A connector(if not using PoE)
- Installation: Wall-mounted
- Dimension: 200×132×17.5mm
- Working Humidity: ≤95%RH
- Working Temperature: -10°C ~ +55°C
- Storage Temperature: -40°C ~ +70°C

# • ISESAR IS-X67S

## **Screen & Display**

• Display Mode: Normally white, Transmissive

• LCD Size: 7 inches (Diagonal)

Aspect Ratio: 16:10


Resolution: 1024×600

Contrast ratio: 500:1

Luminance: 240 cd/m<sup>2</sup>

Viewing Angle: 50° Left, 50° Right, 40° Upper, 50° Lower

Touch Screen: Projected capacitive

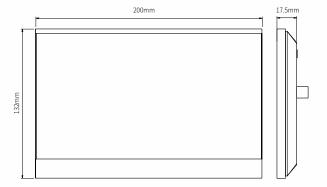

### **Video**

Video codec: H.264

### **Audio**

- SIP v2 (RFC3261)
- Audio Codec: G.771a, G.711u, G.729 (Narrowband)
  G.722 (Broadband)
- DTMF: In-band, out-of-band DTMF (RFC2833), SIP Info
- Echo Cancellation

# **Networking**

 Protocols: IPv4, HTTP, HTTPS, FTP, TFTP, SNMP, DNS, SNTP, RTSP, SRTP, RTP, TCP, UDP, TLS, ICMP, DHCP, ARP

# **Deployment & Maintenance**

- Auto-Provisioning
- Web management portal
- Web-based packet dump
- Configuration backup / restore
- Firmware upgrade
- System logs (include door access logs)

### **Scenarios**

- Villas
- Single-family houses
- Apartment complexes


#### ISESAR Ensure fire safety, save life, save property

# **IS-X67S** Series Quick Guide

# 1 Preparation


PREPARATION O


Before the installation of the device, please check you have the following items on hand.

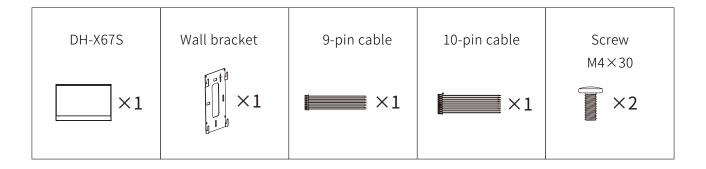

# 2 Product Overview

PRODUCTOVERVIEW.

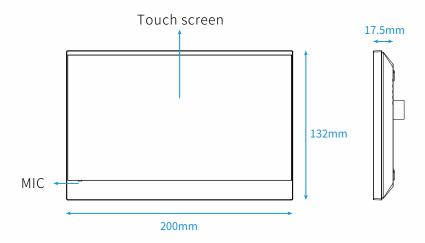

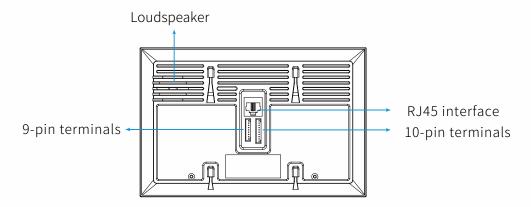


# IS-X67S Series Quick Guide

# 3 Installation


<u>INSTALLATION</u>


### Bottom box embedded into the wall

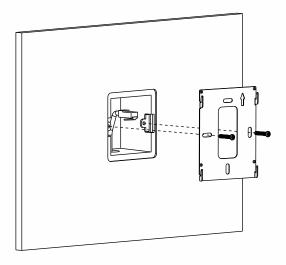

Step 1: All cables and cords go through the bottom box.

Step 2: Lock the wall bracket on bottom box with two M4×30 screws

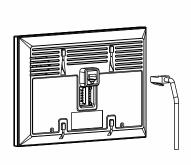

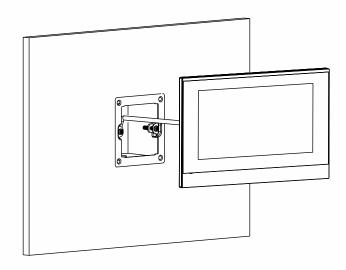


Step 3: Connect all cables and cords to corresponding interfaces of device.

Step 4: Attach the device on wall bracket and lock it with bracket hook.

# **IS-X675** Series Quick Guide

## 4 Interfaces

MTERFACES

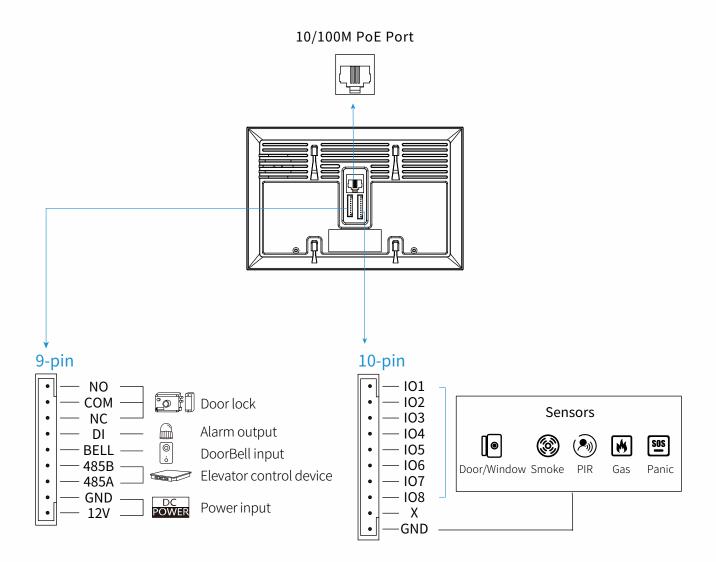



- Pin NO/COM is connected to the cathode lock;
- Pin NC/COM is connected to anode lock or magnetic lock;
- GND is for common ground cable, the the ground cable of 485 and BELL devices MUST share GND with X67S to ensure stable communications.

# IS-X67S Series Quick Guide

# **5 | Specifications**

OS: Linux

Display: 7 Inch LCD

Resolution:1024×600

Input power: DC12V / 1A

PoE: Support

SPECIFICATIONS

• Front panel: ABS

• Working Temperature: -10°C ~ 55°C

• Working Humidity: 10%~95%RH

• Equipment:  $200 \times 132 \times 17.5$ mm

## 6 Functions

#### Video intercom

The visitors call from door phone, you can confirm the identity by video call and unlock the door.

#### Video Surveillance

You can monitor the video stream from IP camera connected to system.

#### Make calls

You can make audio call property management or the other tenants on this device.

#### **Home Security**

The indoor monitor can connect up to 8 alarm zones in home, different alarm status can be set.

### XI'AN ISESAR TECHNOLOGY CO., LTD.

ADD.: Room 2306, Lingxian Times plaza, Gaoxin Road, Xi`an

Web: www.isesar.com