

LETOUR

EIB/KNX 8-fold 10A Switch Module Specification

Applicable Model:

LY/K0810412J

KNX/EIB residential and building intelligent control system

Product Features


- Manual control switch
- Time function: delay on/off time
- Scene, preset controls:8bit/1bit
- Status value query reply
- Threshold function
- Control of Electrothermal Valve Driver
- Relay switch position selection after bus voltage disconnection and recovery
- Output negated
- Stair lighting function with early warning and adjustable stair lighting time

Equipment operation does not require additional supply voltage, directly viaEIB/KNXBus powered.

Technical parameter


Power supply	— Operating Voltage	21~30V DC, provided by bus
Output normal value	— Type	0416.1
	—The number of outputs	8
	— UnRated voltage	250V/440V AC(50~60Hz)
Output switch current	—Meets theAC1(EN60947-4-1)(resistive load)	10A/230V
	—Meets theAC3(EN60947-4-1)(capacitive load)	10A/230V
	—Meets theEN60669load of fluorescent lamps	10A/230V
Connection	— EIB/KNX	Bus connection terminal (diameter0.8mm)
	— Load output connection terminal	screw terminal
	— cable cross section	single core0.2—6.0mm2
Operation and Instructions	— Contact position indication	Multi-core0.2—4mm2 Contact closed - channel open
		Contact Released - Channel Closed
	—Red led and keys	Allocate physical addresses Indicates that the device application layer is working properly
	— Green led flash	
Temperature range	—Run	- 5 °C ... + 45 °C
	—Storage	- 25 °C ... + 55 °C
	—Transportation	- 25 °C ... + 70 °C
Environmental conditions	— Humidity	<93%, Except for condensation
Design	— DIN Rail Module Assembly	35mmDing rail, modular installation
CE standard	—Meets the EMC and low voltage standards,	EN50 090-2-2

Dimensions

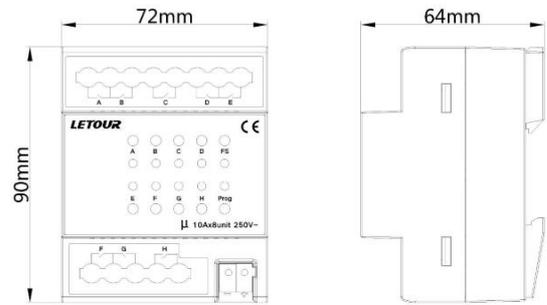

Model	Size	Weight
LY/K0810412J	72x90x64mm	0.24kg

Wiring diagram

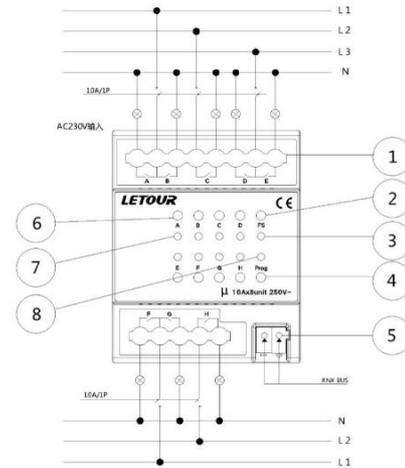

Instruction

- 1) Output/load terminal
- 2) Manual mode and automatic mode switching button
- 3) Manual mode and automatic mode switching indicator
- 4) Program button
- 5) KNX terminals
- 6) Relay control button
- 7) Relay status indicator
- 8) Programming led indicator light, green led indicates entering the physical address programming state installation instructions

Installation Notes

In order to facilitate and quickly install this equipment into the distribution box or small box, according toEN 60715The series is designed as a modular installation device that can be installed in35on the millimeter rail. Installation must ensure that the equipment is operated, tested, inspected, maintained and repaired correctly.

Important tips

Installation and commissioning of equipment should only be performed by qualified and skilled electricians. During planning and implementation of electrical installations, relevant standards, directives, rules and instructions are strictly enforced.

- Devices need to be protected from moisture, dirt, and damage during transportation, storage, and use.
- Do not operate the device outside of specified specifications (such as temperature range).
- The device can only be operated in a closed environment (such as a distribution box).

When the equipment is dirty, only use a dry cloth to clean it. If this is not enough to clean, you can gently wipe with a damp cloth dampened with a little soap solution. Never use alkaline agents or corrosive solvents.